



ONMUSE
欧美斯








Deep 迪普班台

Deep


安装说明书

installation of Deep

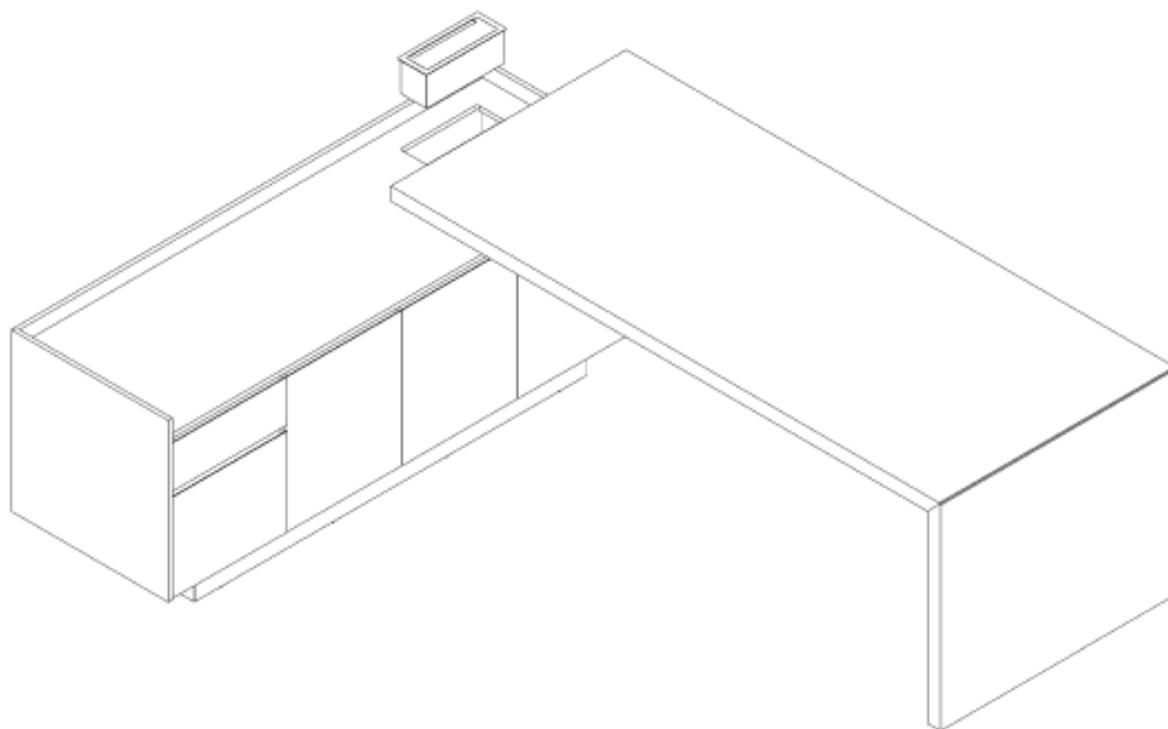
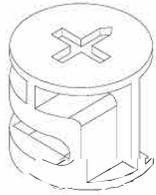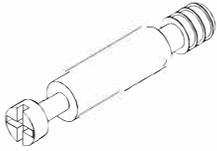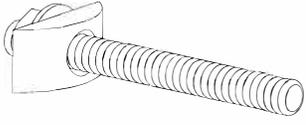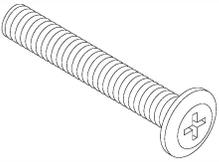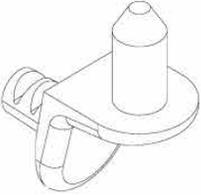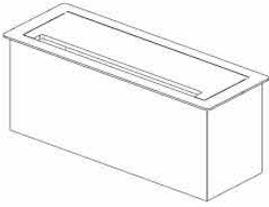
<p>A</p>  <p>偏心轮 = 72</p>	<p>B</p>  <p>偏心杆 = 48</p>	<p>C</p>  <p>折弯连杆 = 12</p>	<p>D</p>  <p>6*30木梢 = 40</p>	<p>E</p>  <p>四合一连接件 = 3</p>
<p>F</p>  <p>M6*80平头螺丝 = 2</p>	<p>G</p>  <p>活动层板托 = 8</p>	<p>H</p>  <p>大弯 不盖 大弯门铰 = 2</p>	<p>I</p>  <p>中弯 半盖 中弯门铰 = 4</p>	<p>J</p>  <p>16寸三节导轨 = 2</p>
<p>K</p>  <p>M3.5*12自攻螺丝 = 24</p>	<p>L</p>  <p>901A桌面插座 = 1</p>	<p>M</p>	<p>N</p>	<p>O</p>


第一步:

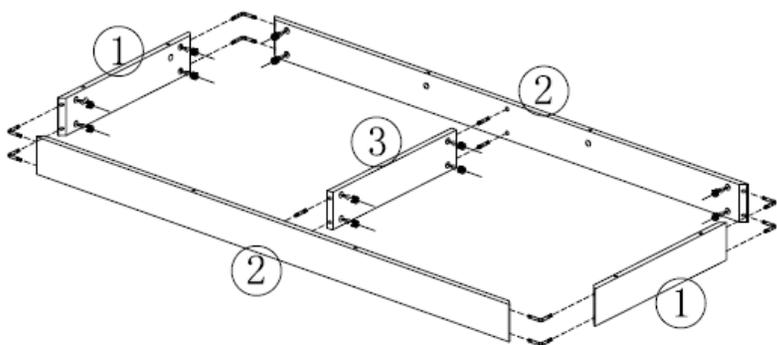

① x 2 ② x 2 ③ x 1

A	偏心轮		20
B	偏心杆		4
C	折弯连杆		8


第二步:

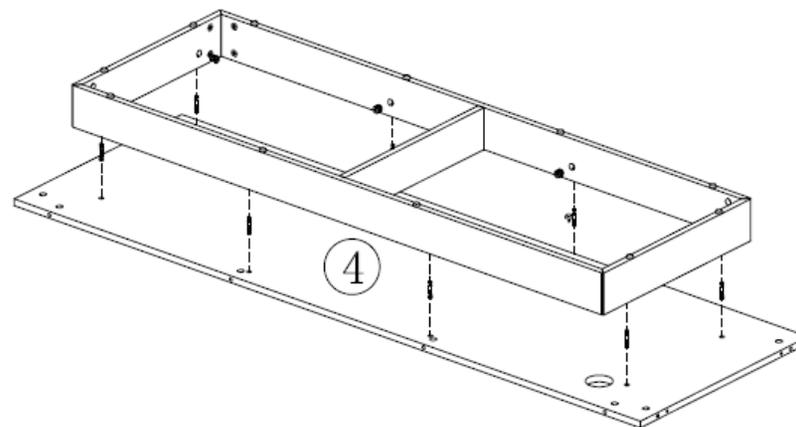

④ x 1

A	偏心轮		8
B	偏心杆		8


第三步:

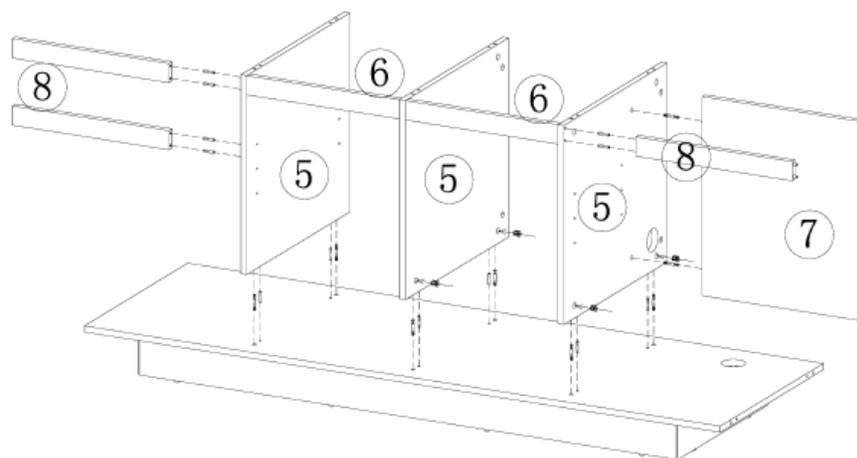

⑤ x 3 ⑥ x 2 ⑦ x 1 ⑧ x 3

A	偏心轮		8
B	偏心杆		8
D	6*30木梢		20


第四步:

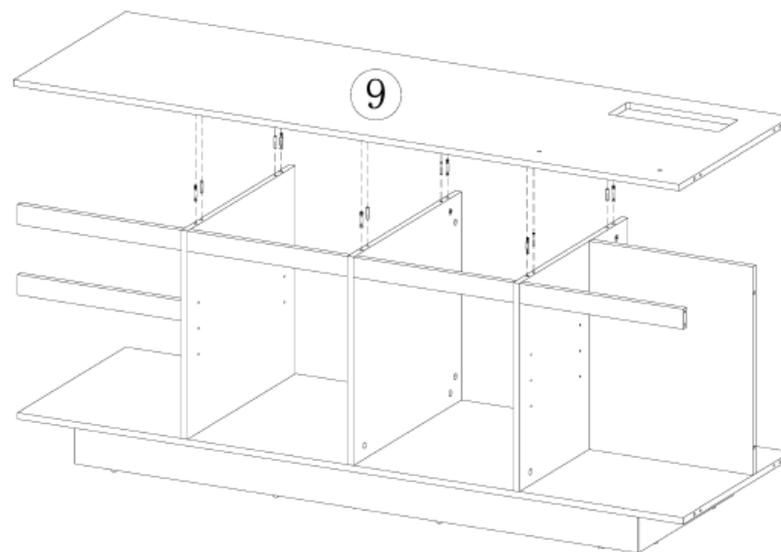

⑨ x 1

A	偏心轮		6
B	偏心杆		6
D	6*30木梢		6


第五步:

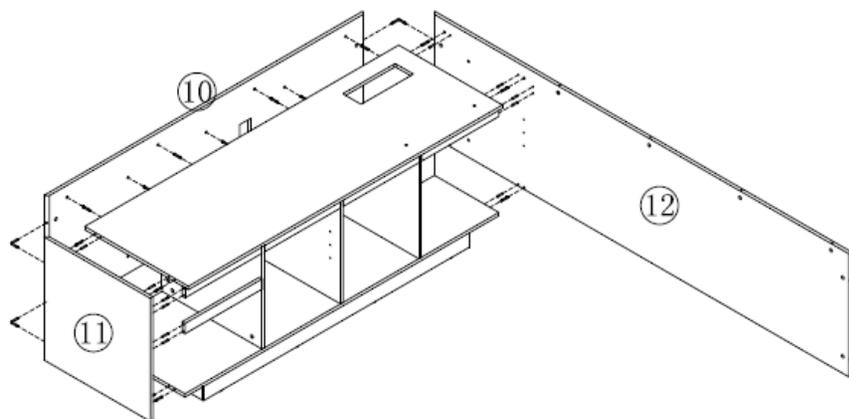

⑩ x 1 ⑪ x 1 ⑫ x 1

A	偏心轮		24
B	偏心杆		16
C	折弯连杆		4
D	6*30木梢		14


第六步:

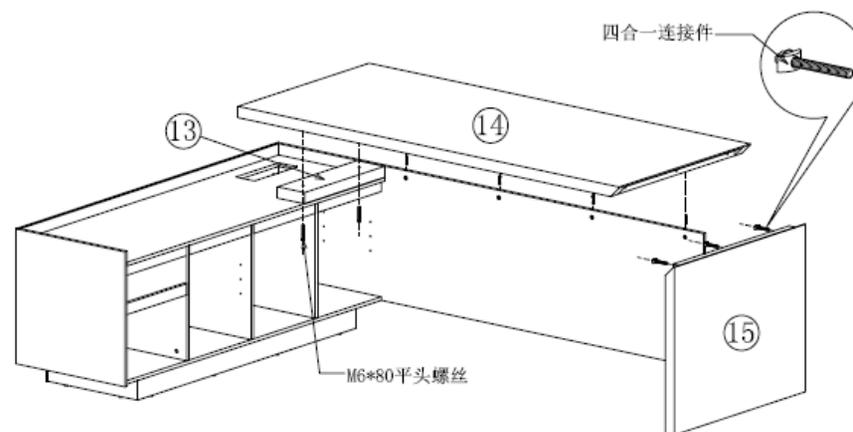

⑬ x 1 ⑭ x 1 ⑮ x 1

A	偏心轮		6
B	偏心杆		6
E	四合一连接件		3
F	M6*80平头螺丝		2


第七步:

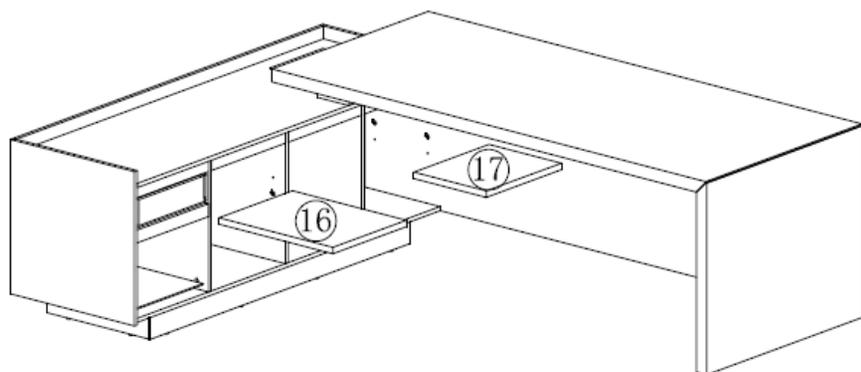

①⑥ x 1 ①⑦ x 1

G	活动层板托		8
---	-------	---	---


第八步:

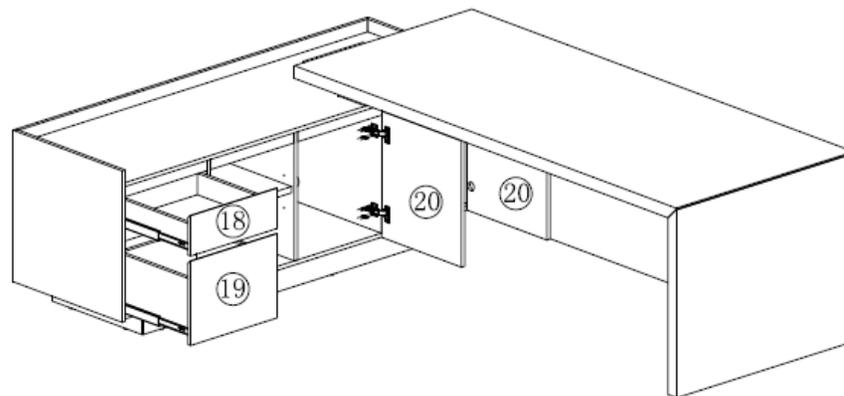


①⑧ x 1 ①⑨ x 1 ②① x 3

H	大弯门铰		2
I	中弯门铰		4
J	16寸三节导轨		2
K	M3.5*12自攻螺丝		12

第九步：放入桌面插座，连接电源

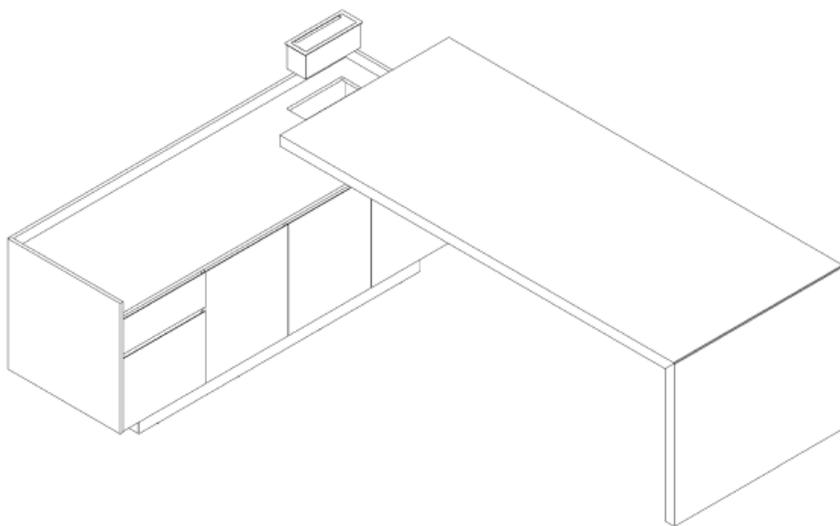


第十步：安装完成

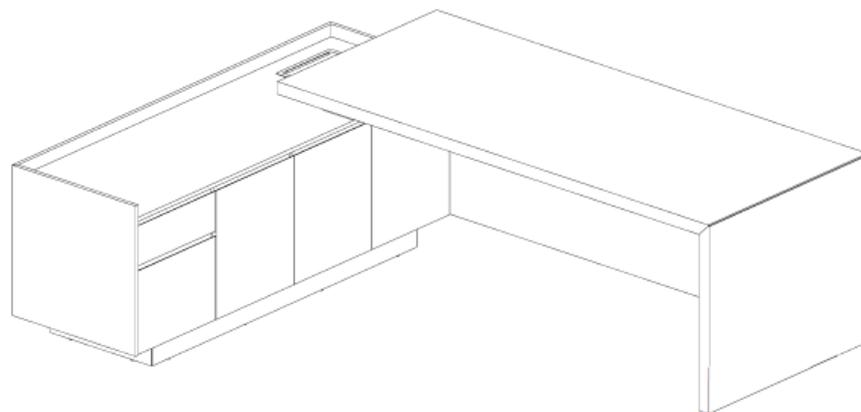

L	901A桌面插座		1
---	----------	---	---

**BE ELEGANT
YOUR OFFICE
LIFESTYLE**

优雅你的办公生活

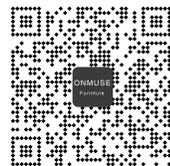

服务电话：400-800-6450

售后邮箱：service@onmuse.com.cn

官方网址：www.onmuse.com